

## Bullfinch Gas Point No. 6087 Installation Instructions.

Caution: This product **must** be installed by a suitably qualified competent person, i.e. a CORGI registered installer.

1. Select an appropriate site to fit your Gas Point that has clear access to the internal LP gas supply.
2. Ensure that there are no electrical cables, water or gas pipes that could be damaged when cutting the holes. Also check for bulkhead brackets that could make fitting of the Gas Point difficult.
3. Once a suitable site has been selected mark the position for the centre hole.
4. Using a 60 to 65 mm diameter hole cutter, carefully cut through the panel.
5. Offer up the Gas Point to the hole and mark the four mounting holes through the unit.
6. Use an appropriately sized drill for the screws to be use and drill the four fixing holes.
7. Mount the Gas Point to the wall using suitable screws.
8. If gaps are detected around the edges of the Gas Point use a Silicon sealant to add extra sealing.
9. The connection to the LP gas supply is by 8 mm nut and olive compression fittings.
10. Check all joints and correct any gas leaks before use. Never check for gas leaks using a naked flame.

